


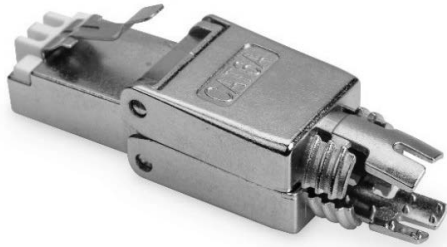


# DIGITUS® CAT6<sub>A</sub> shielded toolless plug




## Instruction Manual


DN-93634

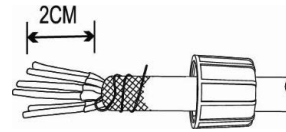


1. Take off the cable jacket about 2 cm

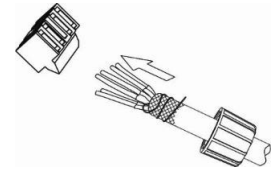


2. Put cable into IDC according terminal T568

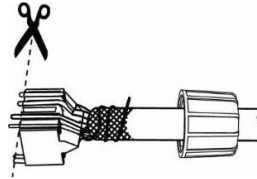


3. Cut away the extra wires

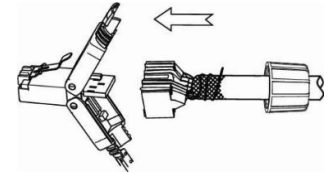

4. To insert IDC into PCB

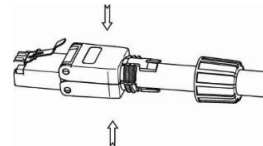

5. Press down both side metal housing until the wire into the IDC pin case.



6. The finished product.


Hereby Assmann Electronic GmbH declares that the Declaration of Conformity is part of the shipping content. If the Declaration of Conformity is missing, you can request it by post under the below mentioned manufacturer address.

[www.assmann.com](http://www.assmann.com)  
Assmann Electronic GmbH  
Auf dem Schüffel 3  
58513 Lüdenscheid  
Germany






# DIGITUS® CAT 6<sub>A</sub> Feldstecker, geschirmt, werkzeugfreier Montageanschluss

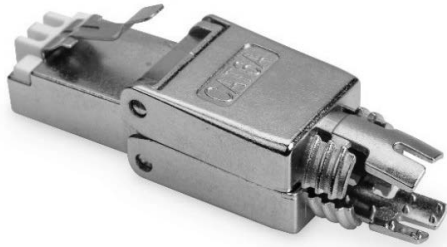


## Montageanleitung


DN-93634

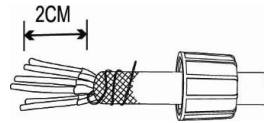


1. Entfernen Sie etwa 2 cm des Kabelmantels.

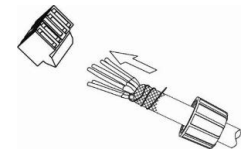


2. Führen Sie die Adern gem. Verdrahtungsverfahren T568 in den Adernmanager ein.

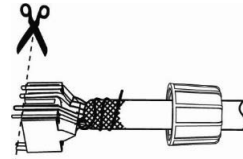


3. Entfernen Sie überschüssige Kabelenden.

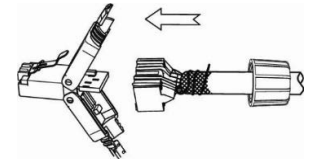

4. Verbinden Sie den beschalteten Adernmanager mit der Platine.

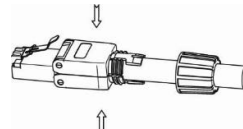

5. Schließen Sie das Metallgehäuse in dem Sie beide Seiten zusammendrücken.



6. Der fertig konfektionierte Stecker.

Hiermit erklärt die Assmann Electronic GmbH, dass die gedruckte Konformitätserklärung dem Produkt beiliegt. Sollte die Konformitätserklärung fehlen, kann diese postalisch unter der unten genannten Herstelleradresse angefordert werden.

[www.assmann.com](http://www.assmann.com)  
Assmann Electronic GmbH  
Auf dem Schüffel 3  
58513 Lüdenscheid  
Germany

